


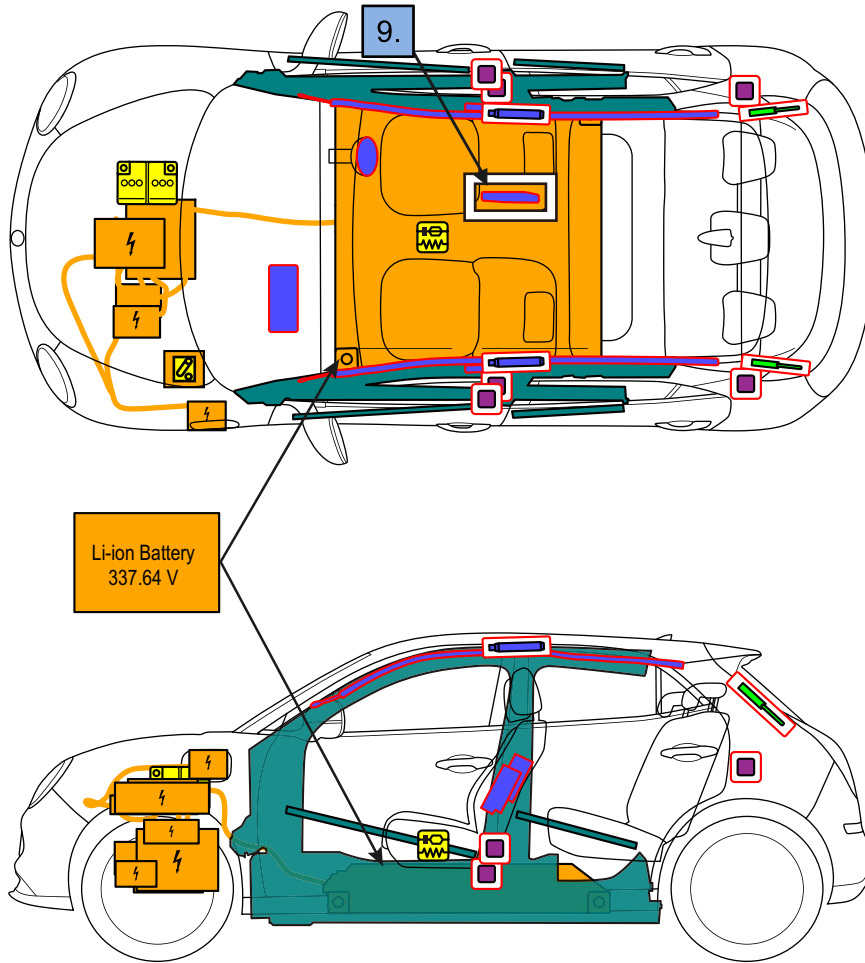

**ORA**  
**Five-door Hatchback**  
**from 2022**



**Legend**

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Battery low voltage
	Gas strut/Preload-ed spring		High strength zone		Zone requiring special attention		Battery pack, high voltage		High voltage power cable
	High voltage component		Low voltage device that disconnects high voltage						

This overview shows the maximum range of equipment of the vehicle.

**ID No.**



**Version No.**

**Page No.**

LGW-ORA-ES11-3

01

1/4

	<p><b>ORA</b> Five-door Hatchback from 2022</p>		
--	---	---	--

## 1. Identification / recognition

 **LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.**

Front car logos position




Rear car logos position




## 2. Immobilisation / stabilisation / lifting


Immobilise and stabilise the vehicle

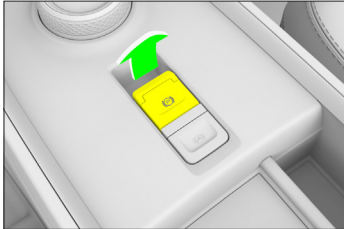

• Apply parking brake;

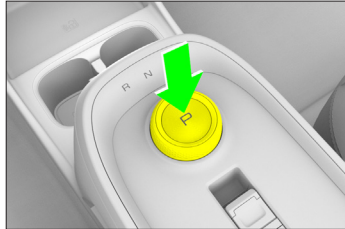


• Press "P" button;

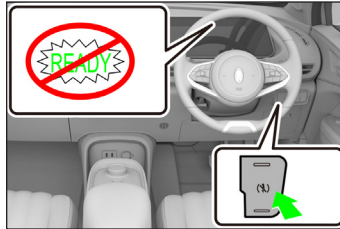

• Shut power off.




Lifting points

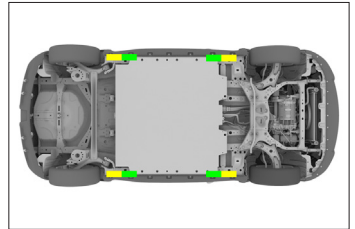




Jacking points  
 Support position

## 3. Disable direct hazards / safety regulations




Main disabling method

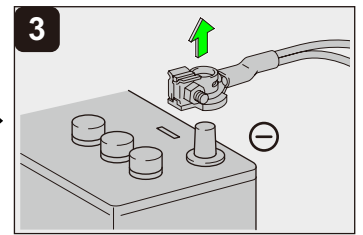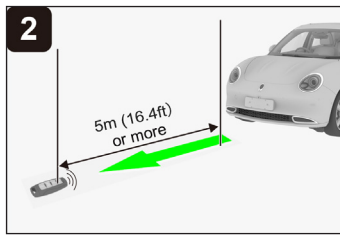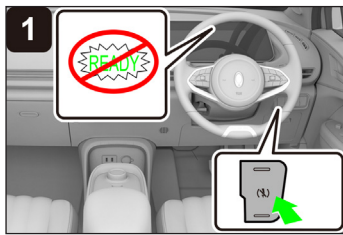

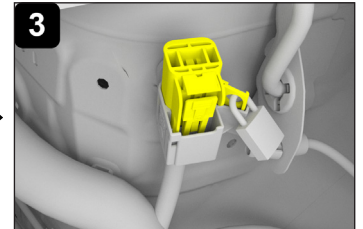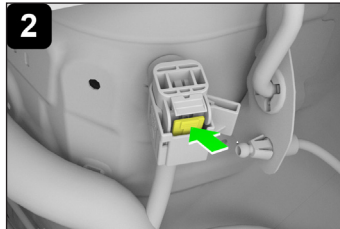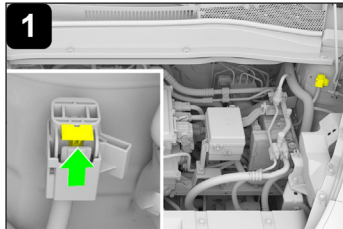

Alternative disabling method

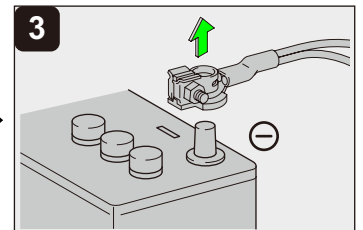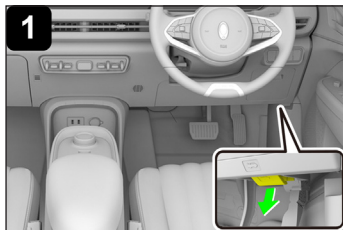 

Access to 12V battery




<p>This overview shows the maximum range of equipment of the vehicle.</p>	<b>ID No.</b>	<b>Version No.</b>	<b>Page No.</b>
	LGW-ORA-ES11-3	01	2/4



	<b>ORA</b> Five-door Hatchback from 2022		
--	--	---	--

## 4. Access to the occupants



### High strength steel

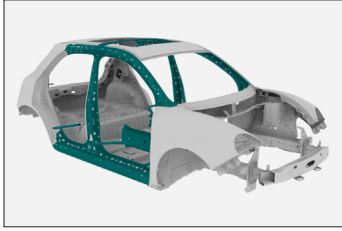


### Mechanical / Electrical seat adjustment

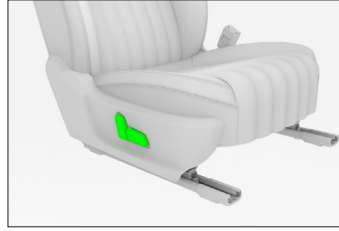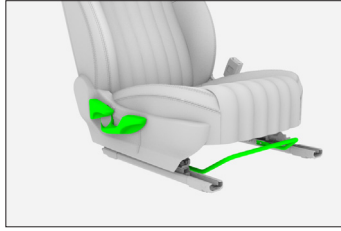




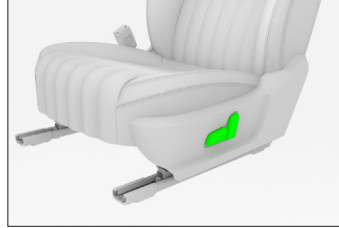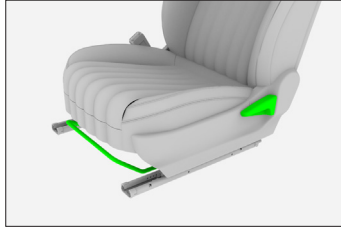


### Steering column adjustment

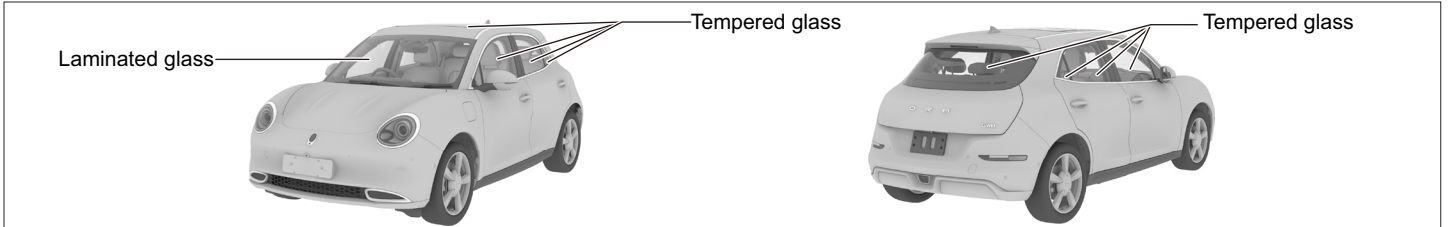


### Glass types

 



## 5. Stored energy / liquids / gases / solids

		12 V
		337.64 V
		550±10 g

## 6. In case of fire

	<b>USE LARGE AMOUNTS OF WATER</b>	If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.
--	-----------------------------------	---

	 <b>BATTERY RE-IGNITION!</b>	
--	---	--

	<b>ORA</b> <b>Five-door Hatchback</b> <b>from 2022</b>		
--	--	---	--

## 7. In case of submersion



Proper personal protective equipment should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation (see chapter 3).

Tilt the vehicle to one side to allow water to drain out of the vehicle.

## 8. Towing / transportation / storage


Location front hook

Location rear hook

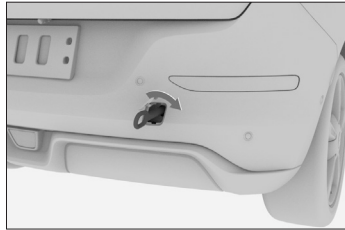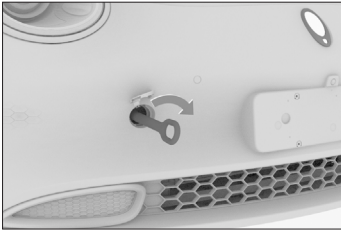


 **STORE AT SAFE DISTANCE FROM OTHER VEHICLES!**

  **BATTERY RE-IGNITION!**

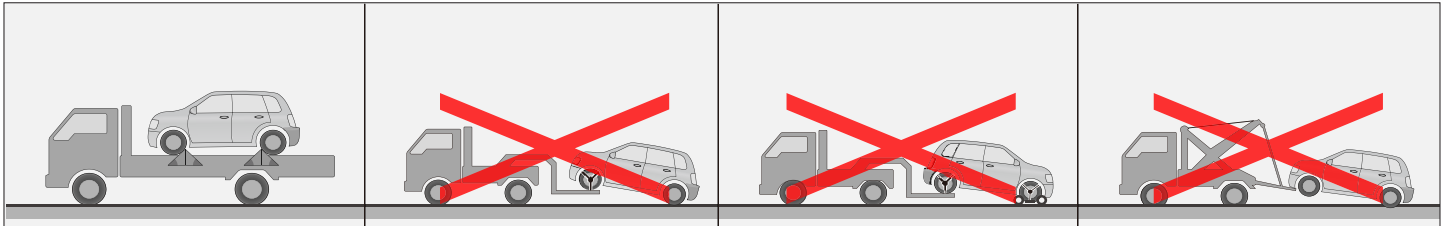




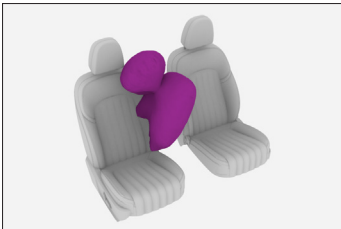




## 9. Important additional information



 


Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark **9.** on page 1.

## 10. Explanation of pictograms used

Pictogram	Designation
	Remove smart key
	Bonnet
	Use thermal Infrared camera
	General warning sign

Pictogram	Designation
	Flammable
	Explosive
	Corrosives
	Air-conditioning component

Pictogram	Designation
	Hazardous to the human health
	Use water to extinguish the fire
	Warning, Electricity